

**Usermanual for MP3 player K8095.  
Version 1.0**


## Table of contents:

OVERVIEW PUSH BUTTON CONTROL .....	3
LED INDICATIONS .....	4
STEREO / MONO USE.....	4
LEARNING A REMOTE .....	5
1. LEARNING A RF REMOTE (VM118R / K8058 / VM160DT / VM160T).....	5
2. LEARNING A IR REMOTE (K8049).....	5
KEYBOARD LAYOUT FOR OPTIONAL REMOTES .....	6
SOUND & PLAY MODES .....	7
1. SOUND MODES:.....	7
2. PLAY MODE: .....	7
3. RANDOM MODE: .....	7
<i>All folders:</i> .....	7
<i>Selected folder:</i> .....	8
PRESET PUSH BUTTONS "A" – "B" – "C" – "D" – "E" .....	9


**The manual describes the use of the MP3 player if a LCD-display is mounted.  
Some functions are not accessible or cannot be used if no LCD is mounted. !**

## Overview push button control

Preset buttons : Play or learn a folder/music \*

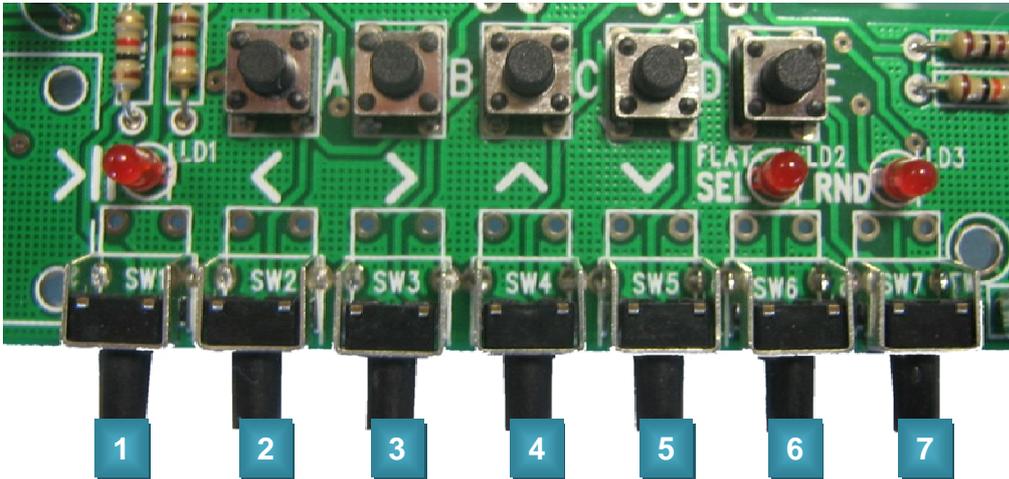

### Short Press:

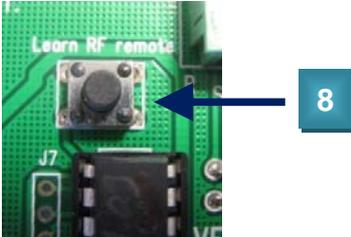

- 1 Play / Pause
- 2 Back
- 3 Forward
- 4 Volume up
- 5 Volume down
- 6 Sound mode
- 7 Random


### Long Press:

- 1 Sleep mode
- 2 Fast backward
- 3 Fast forward
  
- 6 Folder select / play mode\*\*
- 8 Learning a RF remote

\* These preset buttons will be assigned to folders A to E by default if these folders are present onto the SD card.


\*\* This function is only available if an LCD display is mounted (see info sheet 'how to mount an LCD display?' on the product website).

## LED indications

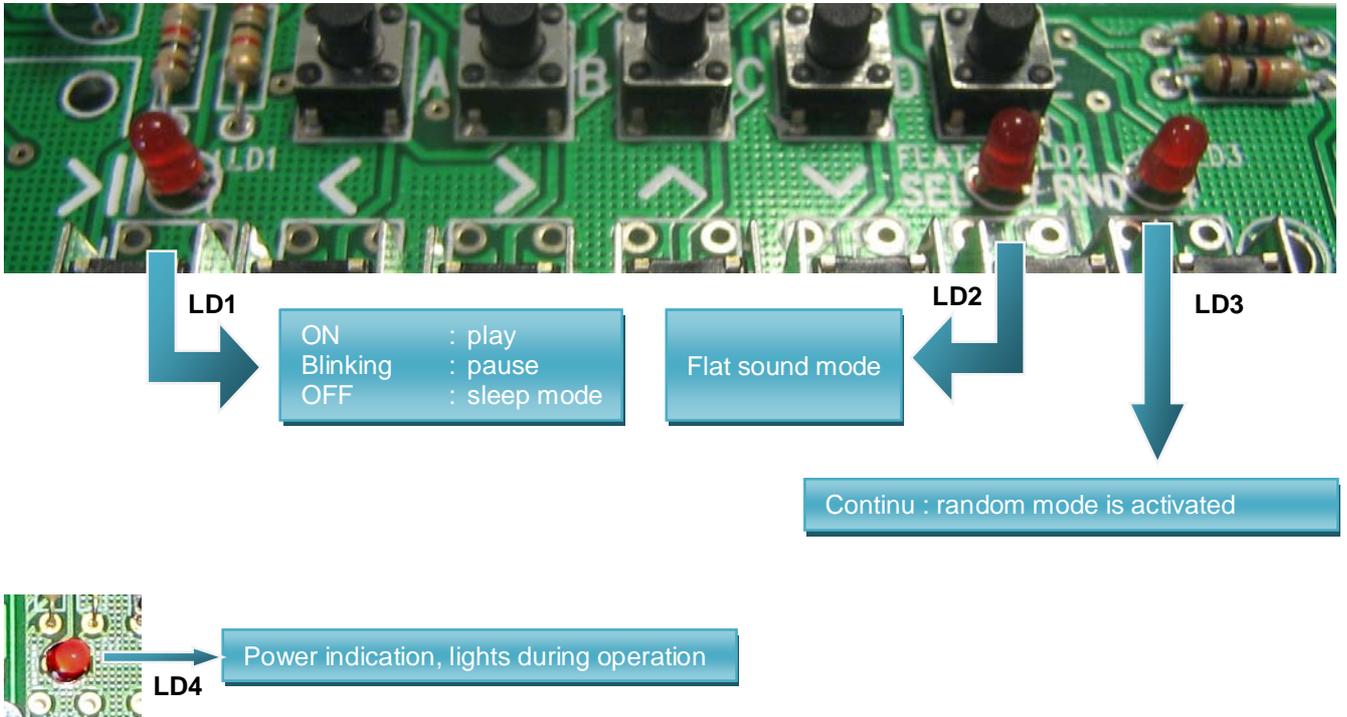

## Stereo / Mono use


For mono output, mount a shunt on SK1.

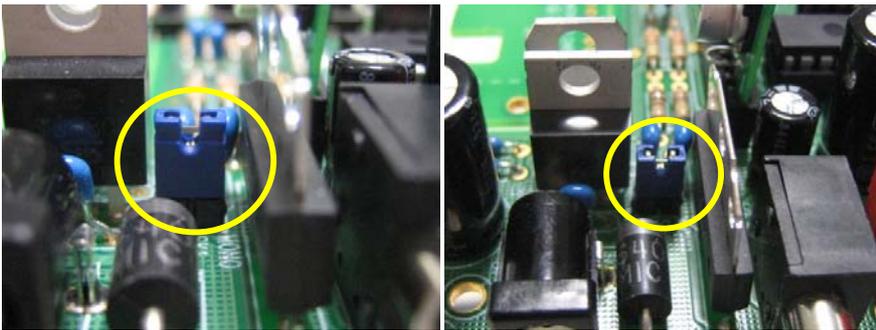

## Learning a remote

### 1. Learning a RF remote (VM118R / K8058 / VM160DT / VM160T)

Learning a RF remote is only possible when the RF-receiver is mounted. Art. RX433N

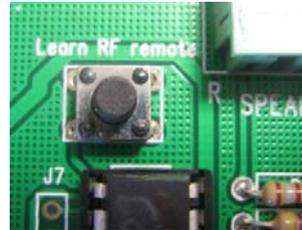

Keep push button SW13 pressed while transmitting with the remote. The LCD display will blink twice to confirm that the remote is learnt (if no display is mounted LED LD4 will blink twice).

 **Attention: Learning a remote erase the previous saved remote.**


### 2. Learning a IR remote (K8049)



 SHIFT

- See section "mode selection" in the manual of K8049 for setting the remote on "MODE 4".
- The remote is now ready to be used.

## Keyboard Layout for optional remotes

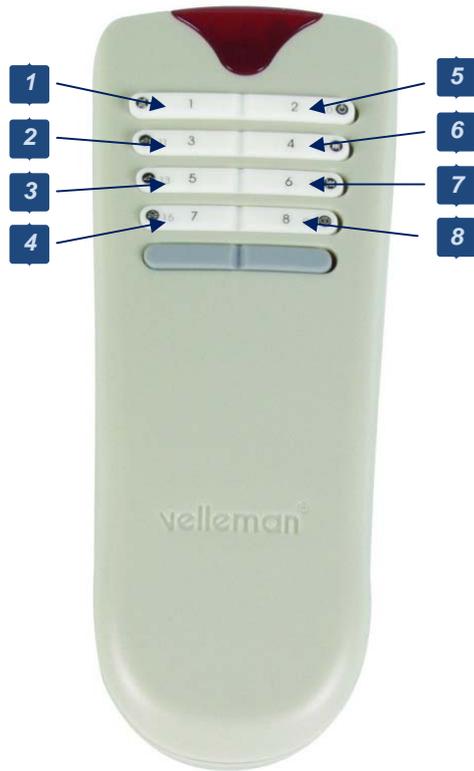

RF-remotes: K8058 / VM118R  
IR-remote : K8049



RF-remote: VM160T



RF-remote:  
VM160DT

- |   |                |
|---|----------------|
| 1 | Play / Pause   |
| 2 | Volume Up      |
| 3 | Volume down    |
| 4 | Random         |
| 5 | Power off      |
| 6 | Next           |
| 7 | Previous       |
| 8 | Browse presets |

## Sound & Play modes

The MP3 player features several possible play modes and preset sound modes. The “play mode” is only available when a LCD-display is mounted!

### 1. Sound modes:



Live - Hall -  
Flat -  
Loudness -  
Heavy - Clear -  
Soft and Disco

### 2. Play mode:



Play all - Play  
folder - Repeat  
folder - Repeat  
all - Shuffle -  
startup play on  
- startup play

 
- **Play all:** play all folders
- **Play folder:** play only the selected folder
- **Repeat folder:** repeat the selected folder after the last played song
- **Repeat all:** repeat all folders after the last played folder
- **Shuffle:** play in random mode all songs of all folders. In this mode a song can be played several times.
- **Startup play on:** When the MP3 unit is powered off it will start automatically to play when powered on.
- **Startup play off:** When the MP3 unit is powered off it doesn't start automatically to play when powered on.

To select a play mode keep push button SW6 long pressed so that you come into the setup mode, press once shortly to go to the “play mode” folder. With the push buttons SW4 “volume up” en SW5 “volume down” you can choose the mode and confirm with SW6.

If you want this mode for next times after switching off the power you must place the MP3 shortly in sleep mode to save your settings.

### 3. Random mode:

All songs or the songs of the selected folder will randomly played once.



#### All folders:

- press long SW6 “select” to open the setup menu.
- Press short “SW6” for the play mode.
- choose the mode “play all” with push buttons SW4 (up) / SW5 (down)
- Confirm with a short press on SW6
- Press push button SW7 for random play



FOLDER  
▲▼= SELECT



PLAY MODE  
▲▼= SELECT



**Selected folder:**

- **Select mode**
  - press long SW6 “select” to open the setup menu.
  - Press short “SW6” for the play mode.
  - choose the mode “play folder” with push buttons SW4 (up) / SW5 (down)
  - Confirm with a short press on SW6
- **Select folder**
  - press long push button SW6 “select” to open the setup menu.
  - Select the folder with push buttons SW4 (up) / SW5 (down)
  - Confirm with a short press on SW6
- **Press push button SW7 for random play**



Only possible  
if a LCD is  
mounted

## Preset push buttons “A” – “B” – “C” – “D” – “E”

All preset push buttons will automatically be linked to a folder on the SD-card.

To do this it's necessary that the folders on the SD-card have the folder name: A, B, C, D and E, each folder have it's own music files.

 
By pressing on a preset push buttons you'll play the music files that are saved in the folder.

It's possible to re-assigned other folders to these preset push buttons. To change the pre-assigned push buttons it's advisable that the LCD is mounted.

### **Procedure to re-assign a preset push button**

#### **First select a folder**

- Press long push button SW6 “select” to open the setup menu.
- Select the folder with push buttons SW4 (up) / SW5 (down)
- Confirm with a short press on SW6



FOLDER  
A: v: SELECT

#### **Assign now the folder**

- Play a song of the selected folder.
- Press push button SW1 to pause the MP3 player
- Press long on the preset button where you want to assigned the folder on it.
- The name of the preset button and the song of that folder appears on the LCD-display
- Led LD4 will blink fast to confirm if no LCD is mounted, if LCD display is mounted a message appear on the screen (see. Fig.)



A: preset folder  
ROCK